

Monaco Parcel Box

ILP-3020

Choosing a suitable location


The Monaco Parcel Box can be either mounted into a timber fence or built into a brick or block wall. You will need to install it in a location that is easily accessible to couriers. The recommended height for the mail slot is 90 to 120cm from the ground.

Contents

3 x Front Panels

1 x Back Box

1 x Accessories Bag

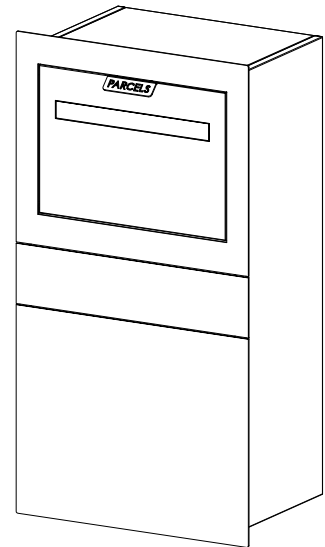

Please note: These installation instructions are for guidance only. You may need to adapt how the item is installed to suit your situation.

Removing the Front Panel for Installation

Firstly, remove the front panel by unscrewing the 12 mounting nuts

1. Open the front parcel door
2. Reach through the front parcel door and unscrew the 2 x top mounting nuts
3. Gently pull the front panel to remove it from the back box


**Continue reading for
installation instructions**

Timber Fence Installation (Built-in)


Tools required

Drill + Timber drill bit (Masonry bit for brick), Tape measure, Jigsaw, Pencil, Spirit level

1. Measure the back box, mark and cut a slightly larger hole into the fence using a jigsaw.

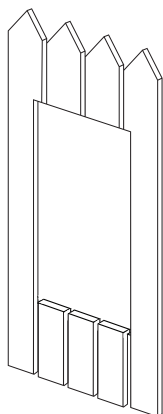

2. Slide the back box through the front of the fence. Screw it to the fence with the screws provided (for hardwood fences, it is easier to pre-drill the screw holes).

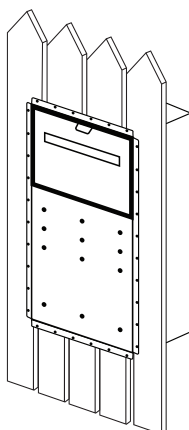

3. Attach the front panel by inserting the 12 x mounting studs through the corresponding holes in the back box. Reach through the back door and secure with the nuts provided.


Reach through the front parcel door and secure the 2 x top mounting nuts.

Brick Wall Installation (Built-in)

1. Build the brickwork up to the desired level and set the back box in place. Plain brick walls - the front flanges should sit flush with the wall. Rendered walls - set the back box forward to allow for the render thickness.

Reach through the front parcel door and secure the 2 x top mounting nuts.

2. Complete the remaining brickwork around the letterbox.

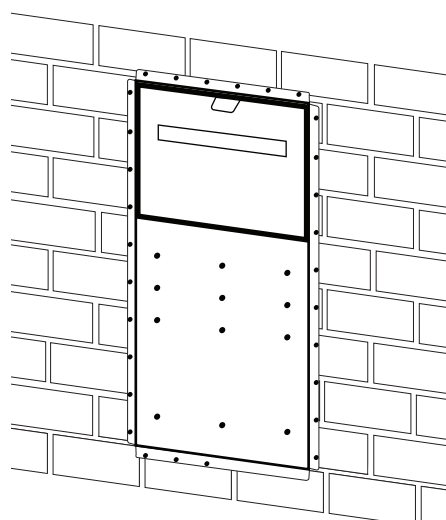

3. Once the brickwork and any rendering has been completed, attach the front panel by inserting the 12 x mounting studs through the corresponding holes in the back box. Reach through the back door and secure with the nuts provided.

Reach through the front parcel door and secure the 2 x top mounting nuts.